 



USING THE INTERACTIVE PENS

- Projector comes with 2 pens that have different colors
- Each pen uses one battery
- When you turn the pen on the light comes on briefly, if the battery is low the light will flash.
- The pen will go into a sleep mode after 20 seconds of inactivity
- The pen will wake up from this mode by simply tapping the pen tip or by toggling the power switch on and off
- When using the pen hold it perpendicular to the board.

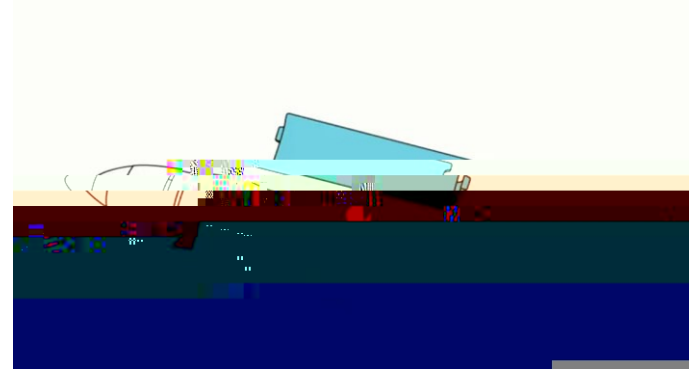

USING THE INTERACTIVE PENS

 - When using the pen hold it perpendicular to the board.
- To move the cursor, just hover over the board without touching it.
- To left click on something tap the pen on the board.
- To double click on something tap the board twice.
- To right click on something press the tip of the pen against the board for 2 seconds.
- To click and drag something, tap and drag with the pen pressed against the board.
- Don't forget to turn off the pen when you are done.

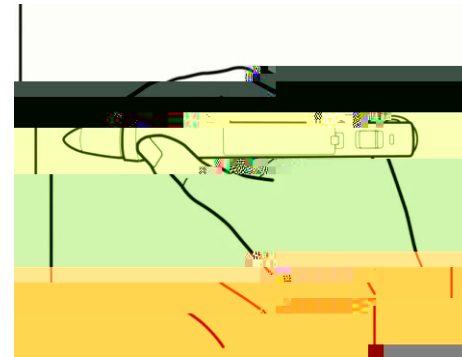

EASY INTERACTIVE TOOLS

There are two modes of tools:

- EasyInteractiveToolsInteractiveMode
- EasyInteractiveToolsWhiteboardMode

 
EASY INTERACTIVE TOOLS INTERACTIVE MC

- The interactive mode has a projected toolbar that lets you use the pen as a mouse to open applications and access links.
- You can also annotate anything displayed from the computer.
 - These annotations can be saved and printed.
- To begin using this mode tap the annotation icon on the toolbar.
 - ‘
 - To use the pen as a mouse select it from the toolbar.
- The annotation tools are in the bottom half of the toolbar.
 - There are 3 annotation tools
 - Pens (There are 4 pens predefined and 1 custom)
 - Highlighter (customizable)
 - Eraser (There are 2 erasers: partial erase and clear full screen)
 - Tap on the desired tool to activate it.
- Tap the mouse button to return to use the pen as a mouse.

EASY INTERACTIVE TOOLS INTERACTIVE MC

- Touch/click the save button to save your annotations.
- Choose the location to save as you normally would.
- Use the on screen keyboard to name **file**.
- Click on the save as option to choose the type **file**.
 - You can save as a PDF, BMP, PNG, JPG or **EDIT**
 - Edit file type allows you to go back and edit **the** annotations.
-

EASY INTERACTIVE TOOLS OTHER TOC

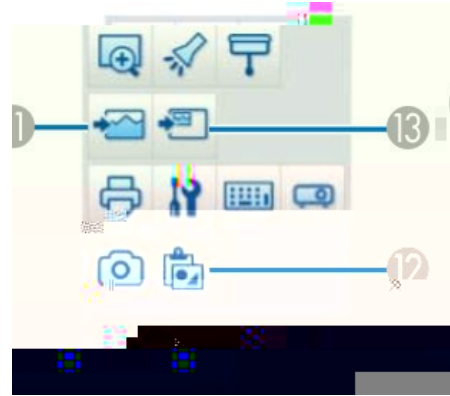

8 Projector control: Lets you use the buttons to control the projector.

9 Shade: Covers the display with a shade. Drag the sides of the shaded area to size it. Click to delete the shade.

10 Spotlight: Emphasizes a portion of the display using a spotlight effect. Drag the spotlight frame to select the area of emphasis. Click to delete the spotlight.

11 Select background: (Whiteboard mode only) Lets you select one of the following as a background image:

- One of nine provided patterns
- A still image of the computer desktop
- An image file
- A document camera image

12 Paste: (Whiteboard mode only) Pastes data from the clipboard to the currently displayed page.

13 Insert image: (Whiteboard mode only) Lets you select a .jpg, .bmp, or .png image file to insert into the currently displayed page.

EASY INTERACTIVE TOOLS WHITEBOARD MC



EASY INTERACTIVE TOOLS WHITEBOARD MC

- Tap the save button to save your pages

- Choose the location to save as you normally would

- Use the on screen keyboard

S to tm07 Tc eo•

Use the.6 (l)-2.Tf 0 Tc 0 (e l)-3.8 (o)3.4|43|| 45.96 ie V